52ØELECTRONIC METER

TRUST SUPER TUNING SYSTEM AIMING AT REAL COMPETITIONS.

Geraldy


TURBO METER

Instruction Manual


TRUST CO.,LTD.

MADE IN JAPAN.


TRUST

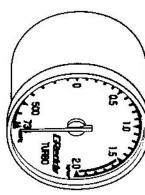


Turbo Meter 1pc.

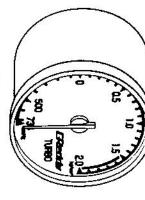


Pressure Sensor

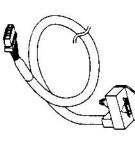

8

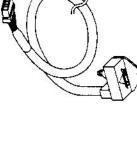


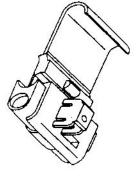

Electrical Tap 4pc.



Wire Tie 15cm

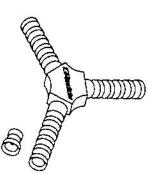

Electrical Harness lpc.

4 dia. Vacumn Hose 1pc.

Instruction Manual lpc.

3-Way Joint w/ Orifice lpc.

Parts List:

Meter Mounting


have the meter interfer with the driver's veiw of the road or other When looking for a location to mount the meter, be sure not to Important


important instruments.

Note

installation. Mounting brackets for these warning meters are availble for simple

Never mount the meter facing downward. Always mount the Caution

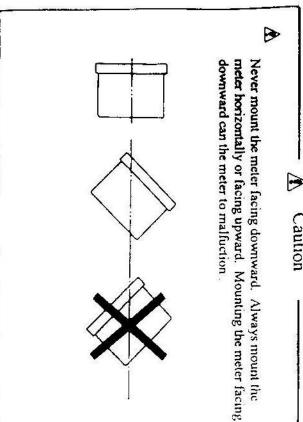

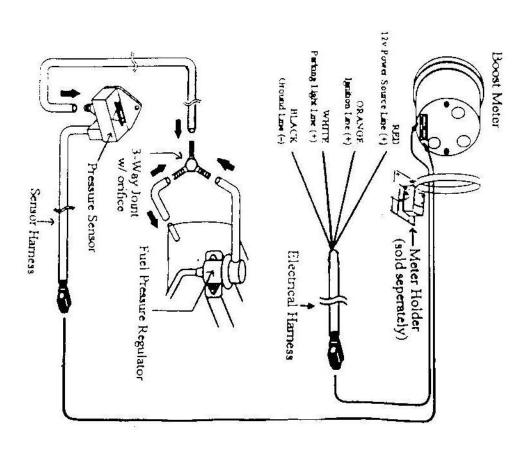


Installation

△ Caution

Avaid mounting the sensor in a location where the sensor could get wet or het.

Make sure the sensor and the sensor harness is away from the ignition system. (i.e. ignition coil box) Noise (signal) from the ignition system may cause the meter to display faulty readings.

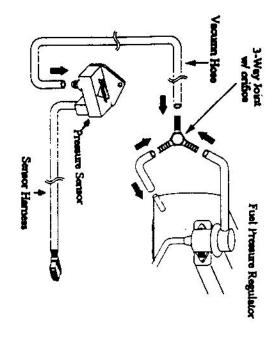

Important

A Make sure the orifice does not slip out of the 3-way joint.

The provided vacuum hose is 500mm, therefore it is important to mount the presence sensor within it's reach.

Installation:

If the neddle of the meter moves irractically at idle, use the provided orifice. Insert the orifice into the 3-way joint as shown below. (on the side to the sensor.)

